




FIG -3 : HEIGHT AND LATERAL LOCATION OF SIGNS – TYPICAL APPLICATIONS

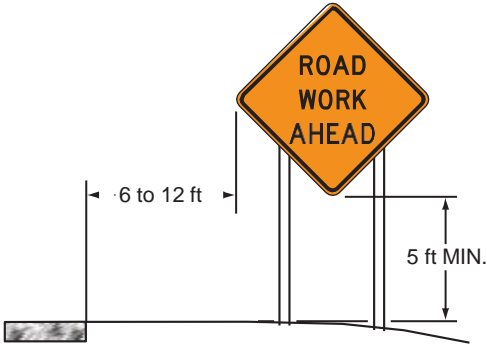


RURAL AREA

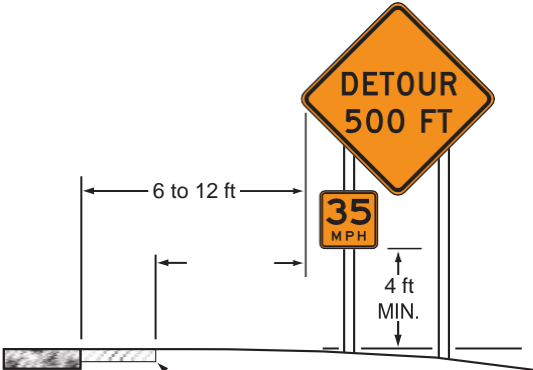

**RURAL AREA WITH
ADVISORY SPEED PLAQUE**

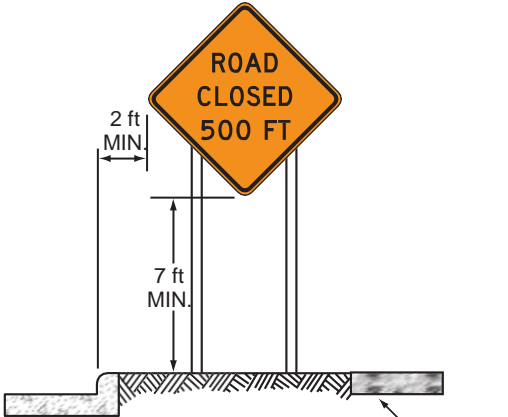

URBAN AREA

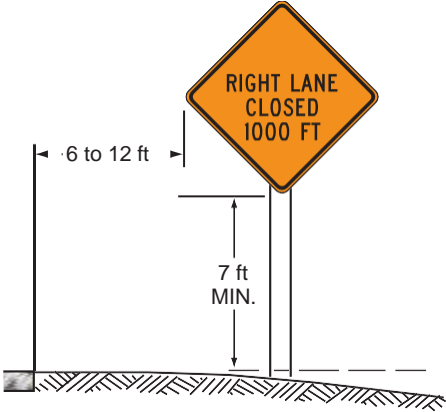

URBAN AREA

Source: Sect. 6F.03 MUTCD Edition 2009

